 
 


A

 
Unloaders & Governors

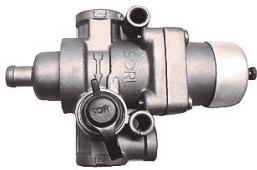

1

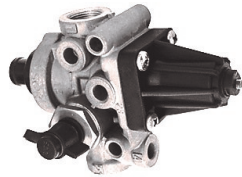

2

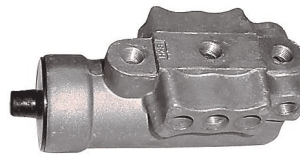


3




4

B

 
Protection Valves

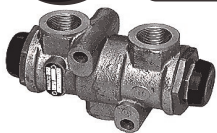


1

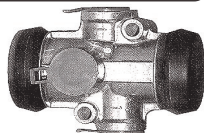 


2

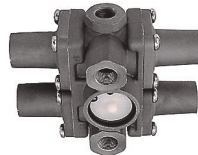 

3

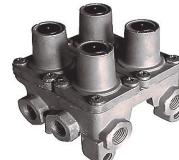 


4

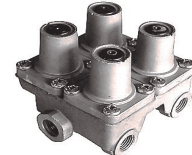 


5



 6

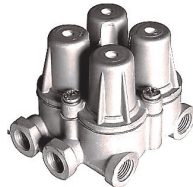


7

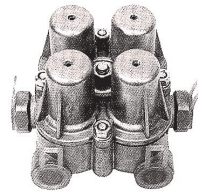 


8



 
9

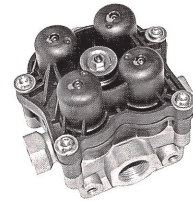


10

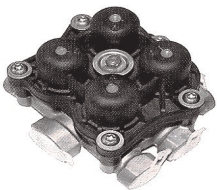 


11

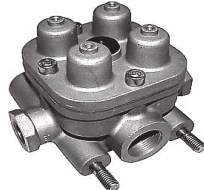 

12

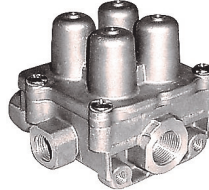 

13

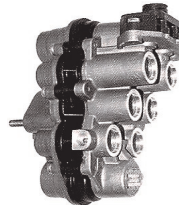 


14



15

C

 Check Valves, Line Filters, Shut Off Cocks & Palm Couplings

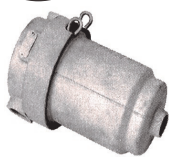

1



2



3



4



5



6



7



 
8




9



10

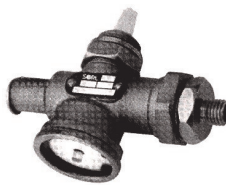

11

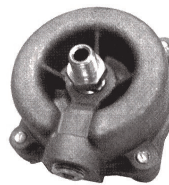 

12



13



14



15



16



17



18



19



20

 
M18

D

Trailer Control Valves



1

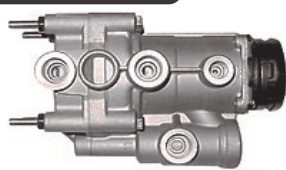

2



3



 
4

E

Relay Valves & Release Valves



1

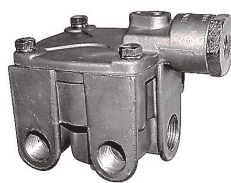

2



3



4



5



 
6



7




8

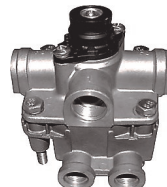

9



 
10

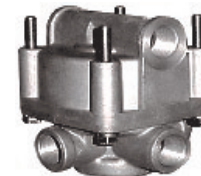


11



 
12

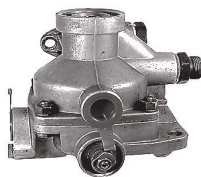


13

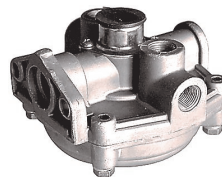 

14

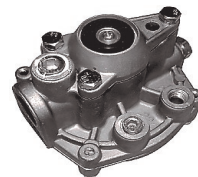 

15

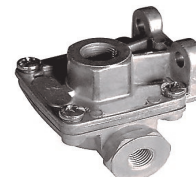 

16

F

Hand Brake Valves



1



2



3



4



5



6



7



8



9



10



11



12



13



14



15



16



17



18



19



20



21



22



 
23



24


G

Load Sensing Valves

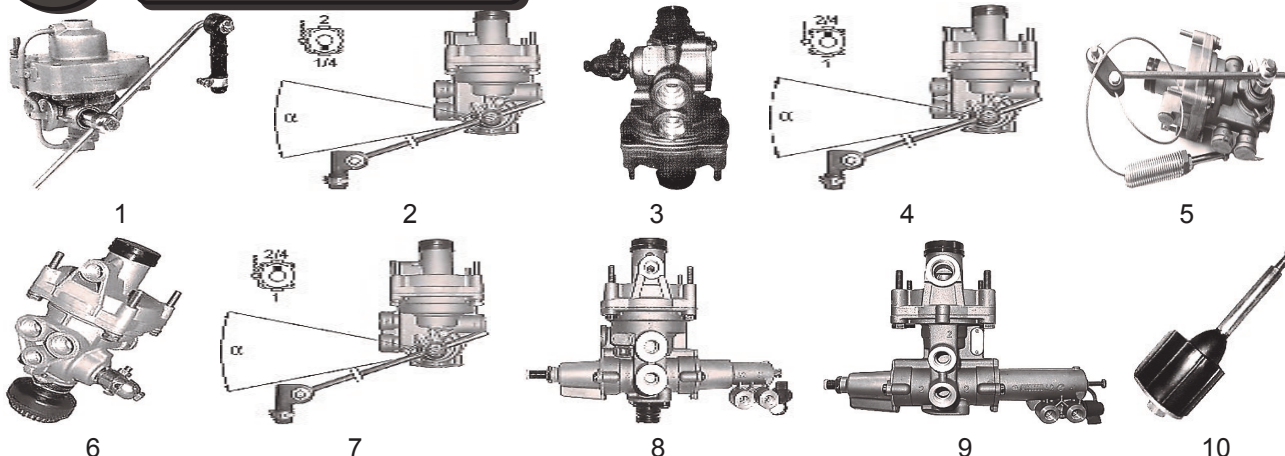


H

 CLUTCH SERVOS

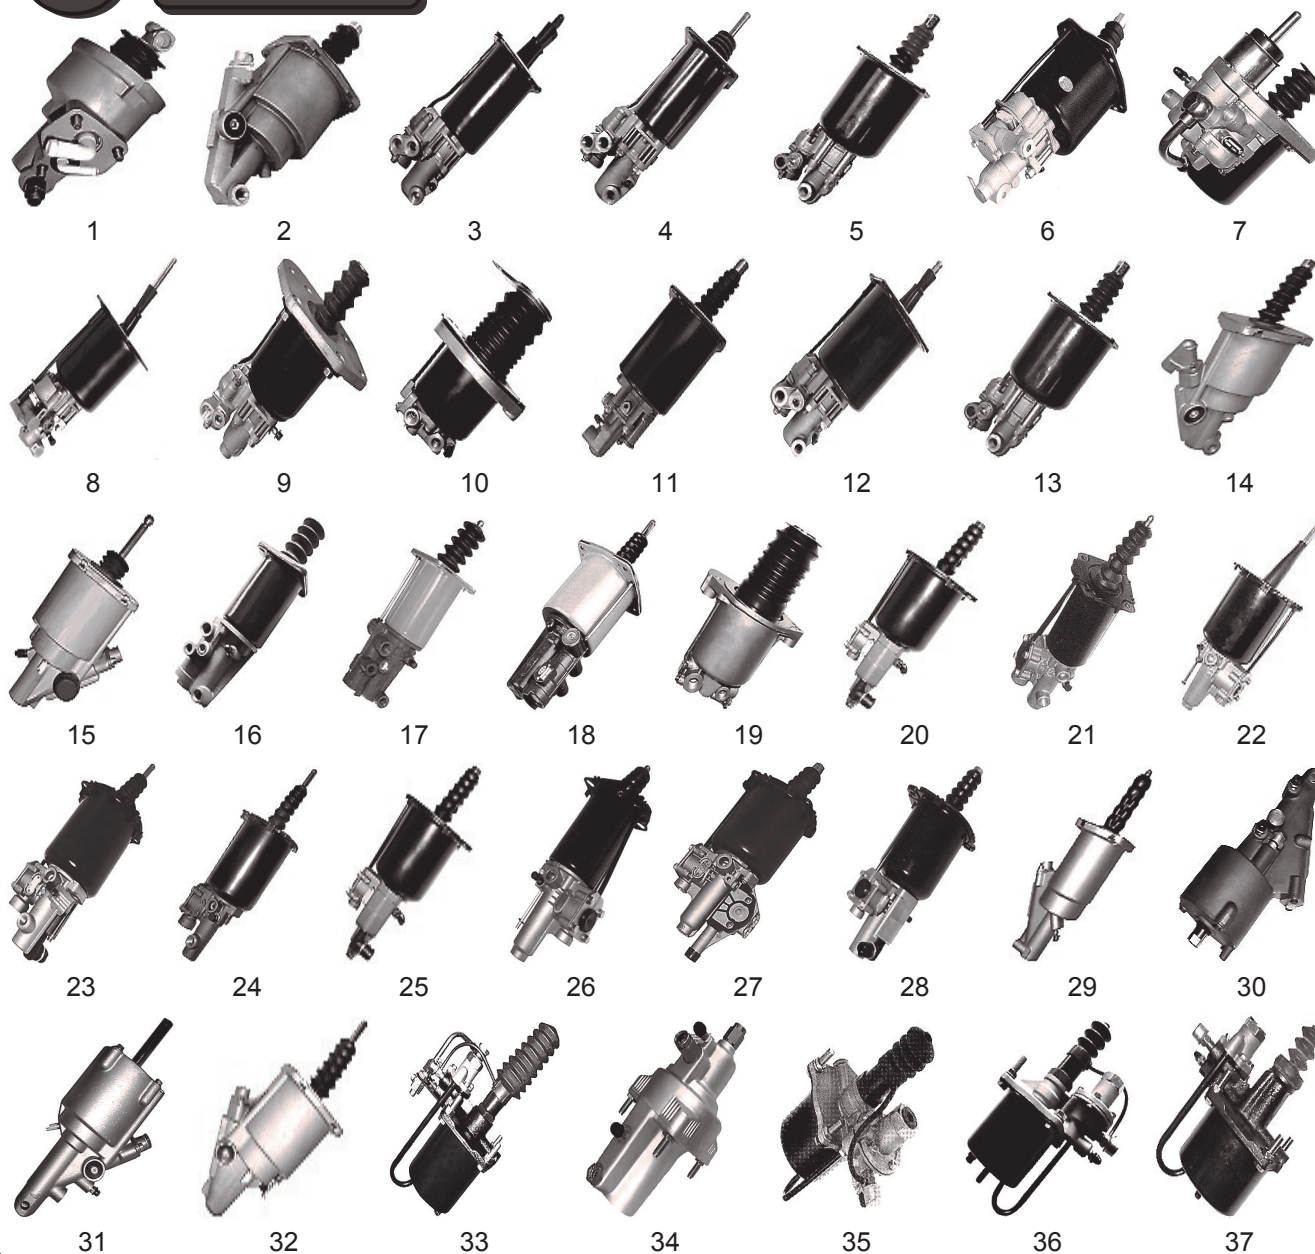


I

 Levelling, Raise / Lower Valves & Spring Boxes

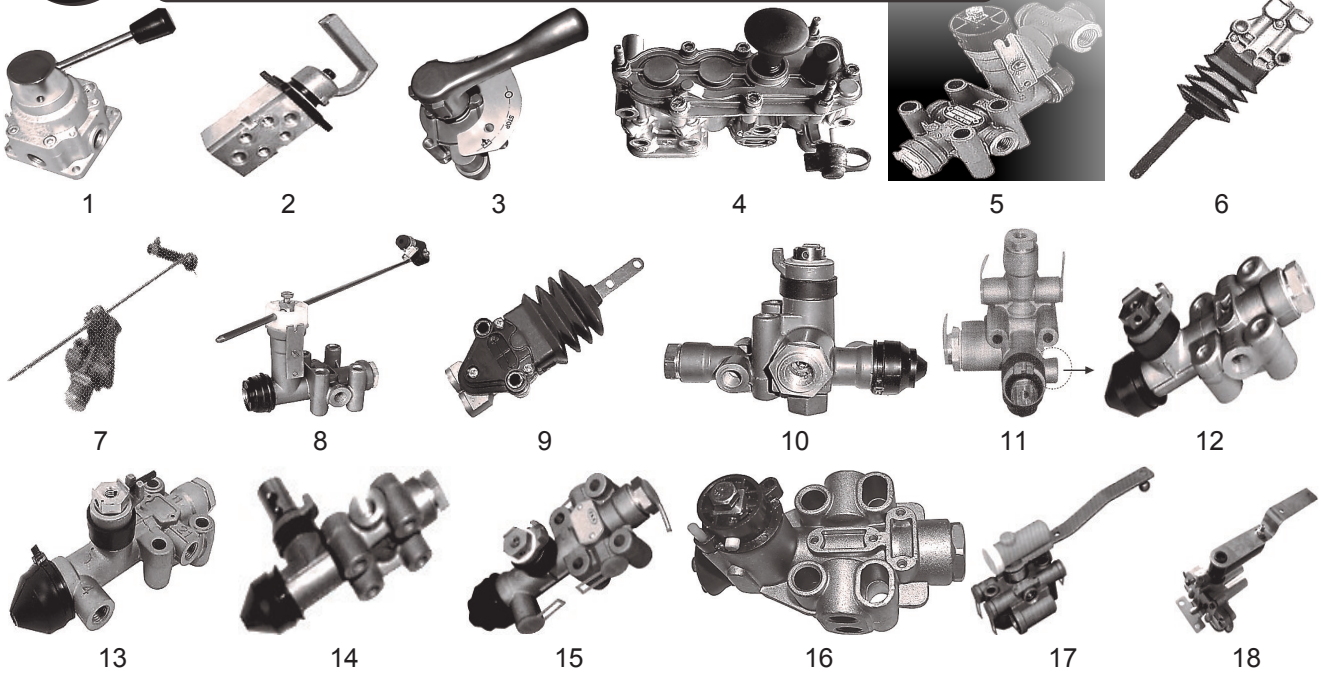

J

 Master Cylinders

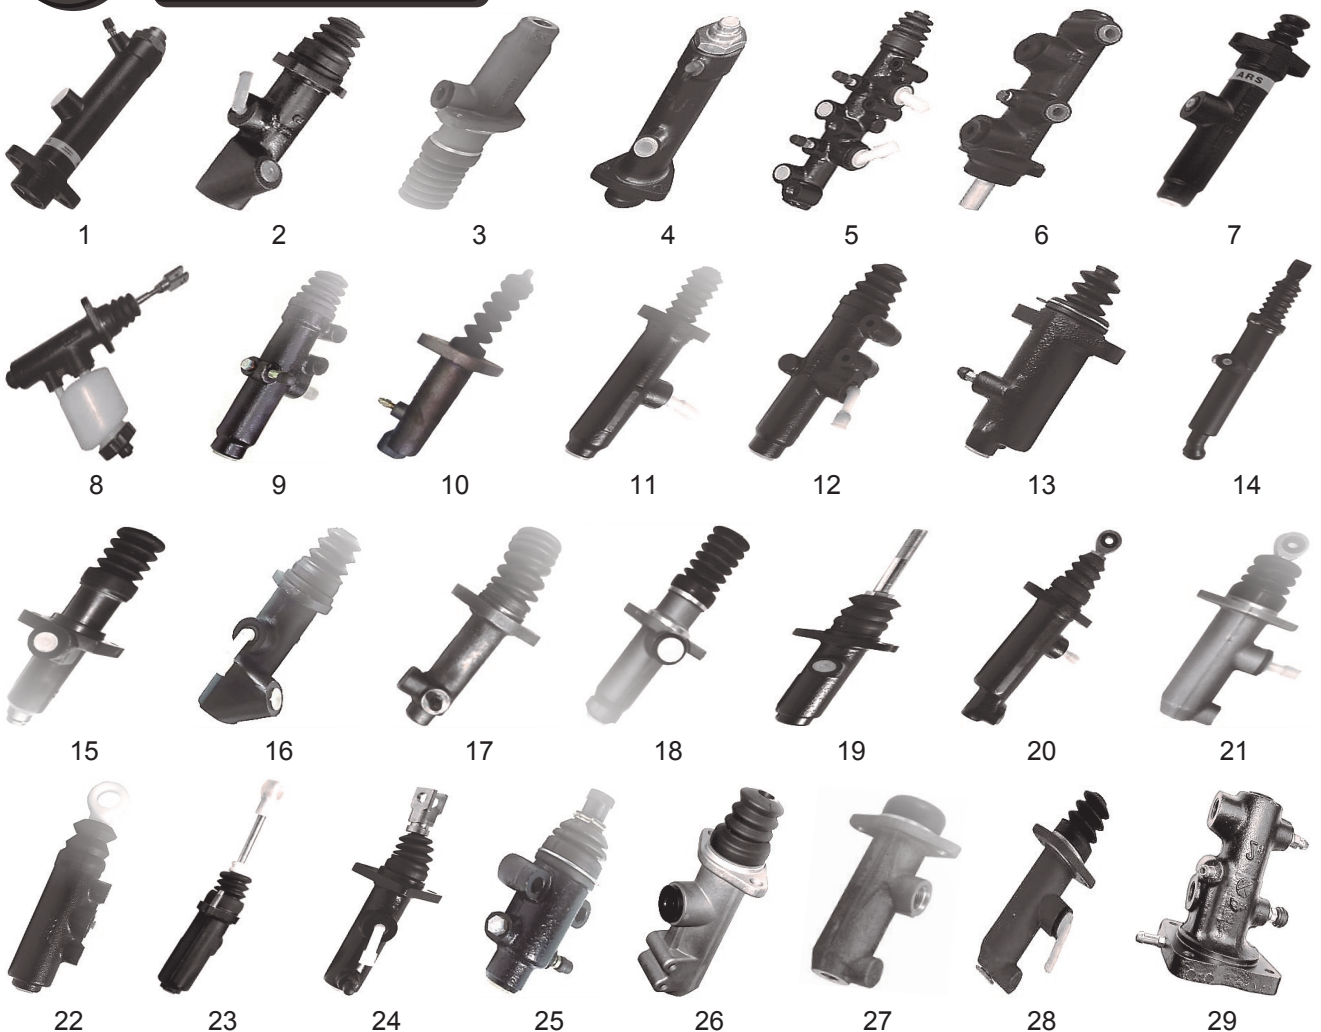


K

Exhaust Brake, Directional Control, Diff.Lock & Splitter Valves



 
1

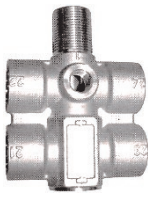

2



 3

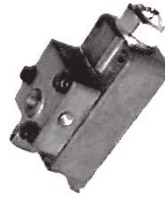

4



5



6



7



8



9



10



 
11



12



13

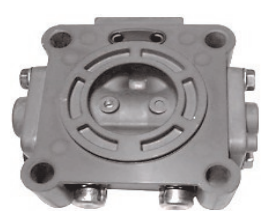

14



15



 
16




17



18

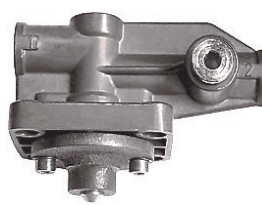

19

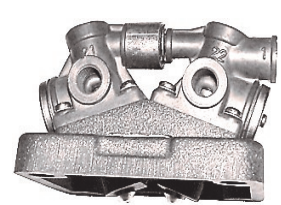 

20



21



22



23



24



 
25



26



27

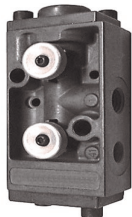


28




29



 30

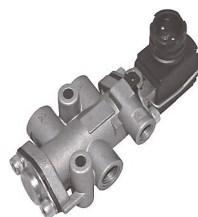


31

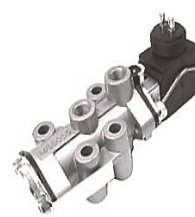 

32



 33

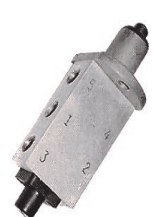


34

L


Electro Valves, Solenoid Valves & Height Sensors



 1

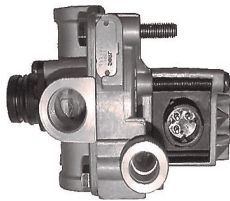

2

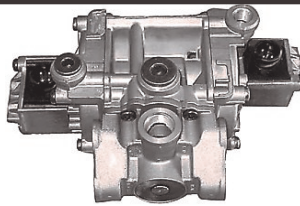 

3



4



5

M

Pressure Limiting, Charging & Adapter Valves



1



2



3



 
4




5



6

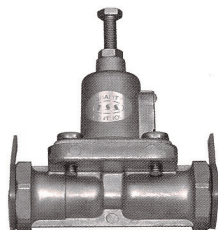

7

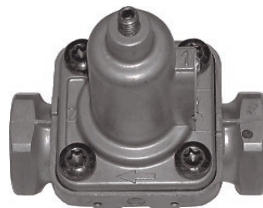 


8



9



 10

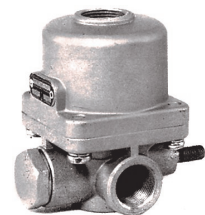

11

N

Brake Chambers



 
1



2



3

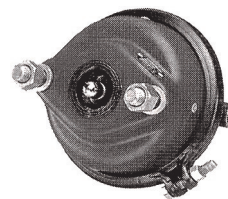

4



 
5



6



7

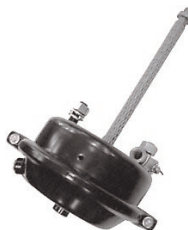

8



9



 
10



11



12

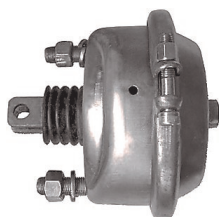

13



14



 
15




16

O


Wedge Type Spring Brakes

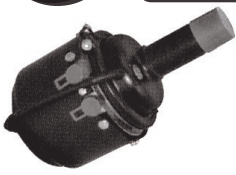

1

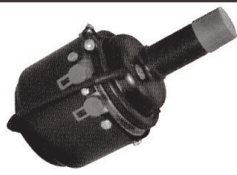 


2

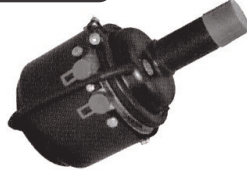 

3



 
4

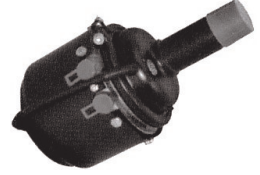

5

P

 Cylinders

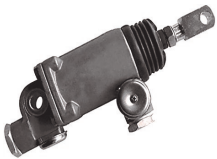

1



2



3



4



5



6

Q

Foot Valves



1



2



3



4



5



6



7



8



9



10



11



12



13



14



15



16



17



18



19



20



21



 
22




23



24

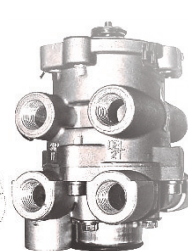


25

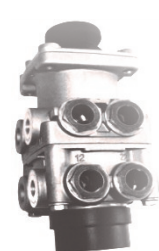 

26


R

 Air Dryers

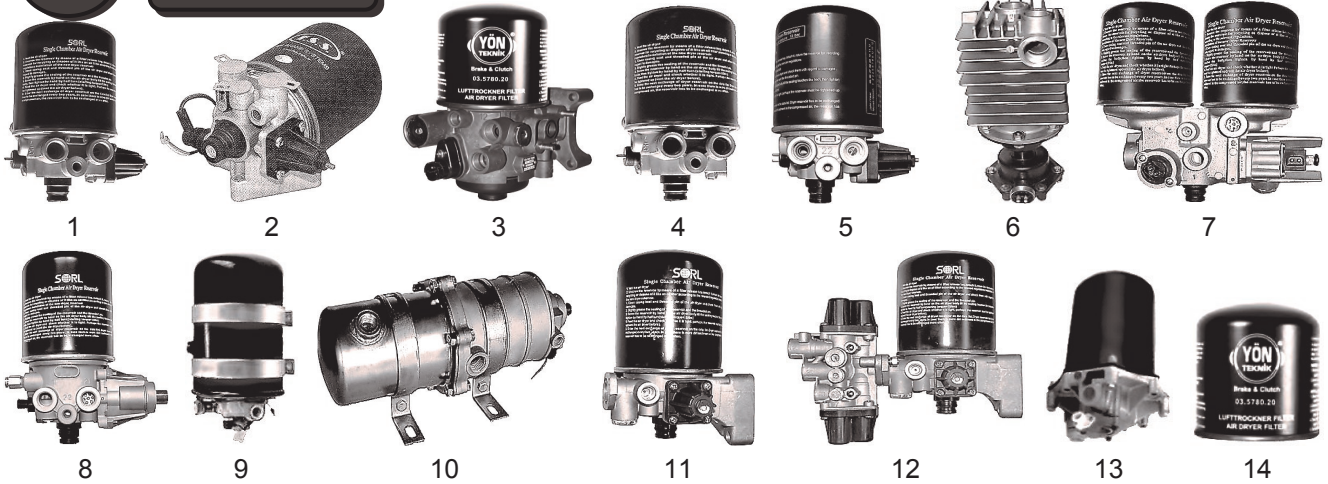


S

 Spring Brakes

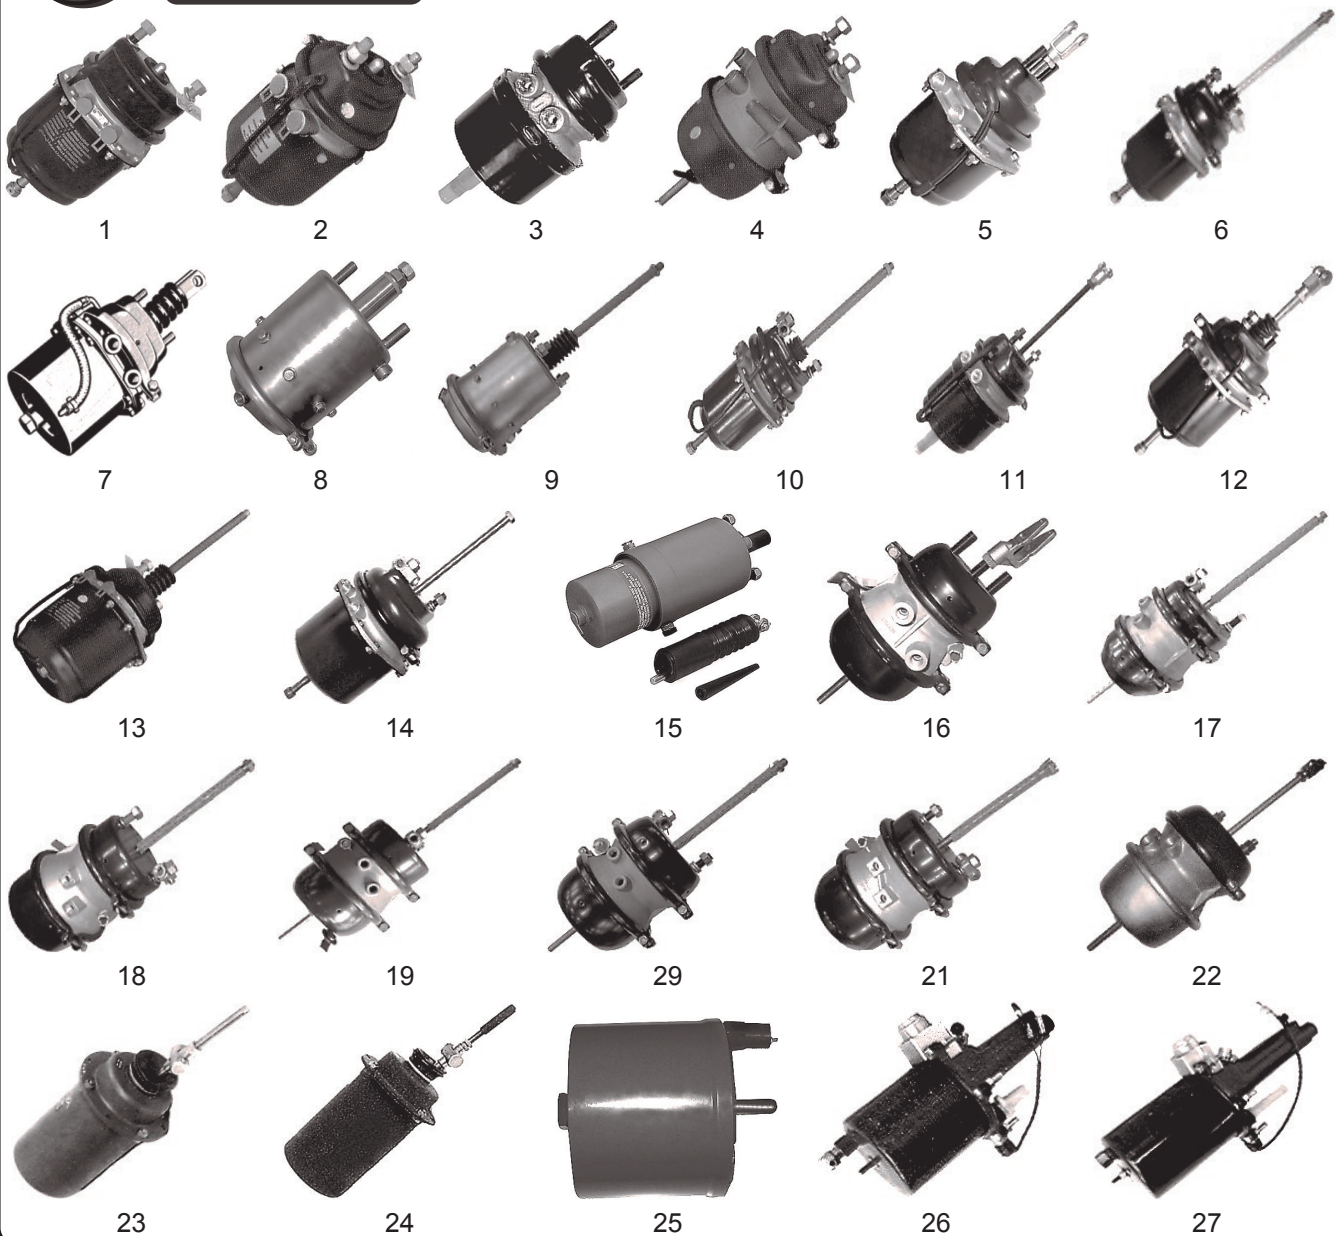

T

 Compressors

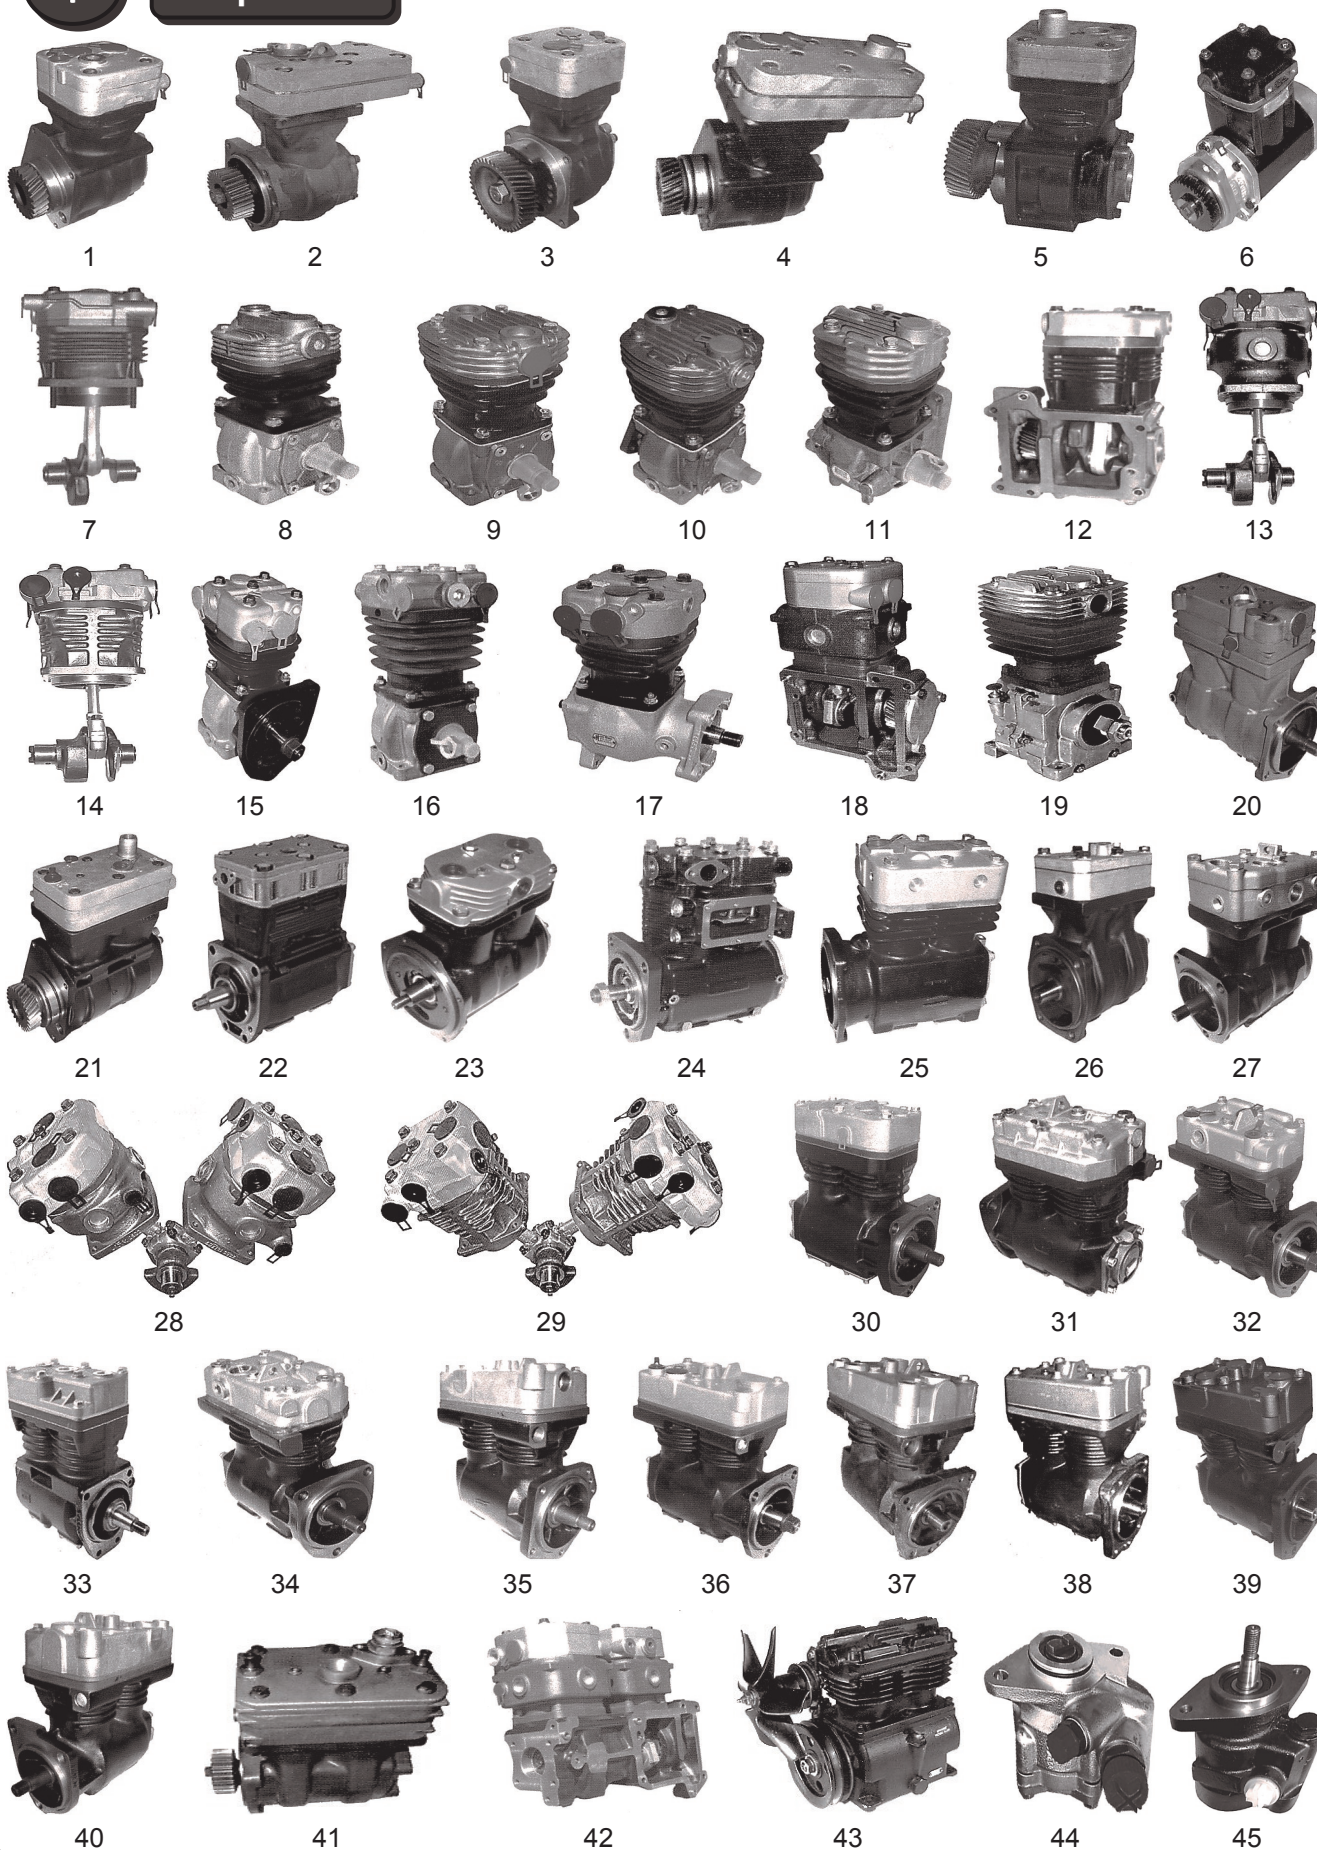

U

AUTOMATIC SLACK ADJUSTERS



1



2



3



4



5



6



7



8



9



10



11



12



13



14



15



16



17



18



19



20



21



22



23



24



25



26



27



28



29



30



31



32



33



34



35



36



37



38



39



40



41



42



43



44



45



46



47



48



49



50



51



52



53



54



55

HOSE JOINERS



 
Hose Joiners



Hose - Union
STR Connector



Hose Tee

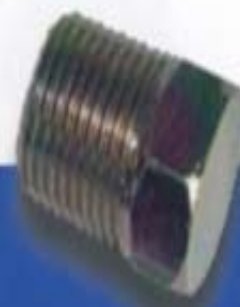

Plugs Imperial



Plugs Metric



Reducers
Imperial



Reducers
Metric



Sockets



Test Point
1/4"



T Block
16 x 1/4F x 12 Union



T Block
3/8 x 1/4 F x 1/2"



Super Airbrake Systems

SUPER AIR BRAKE SYSTEMS

CR. KWAFORD AND STRUANWAY ROAD, STRUANDALE, PORT ELIZABETH

TEL: 041 453 4113 - FAX: 041 453 4117

TEL: 041 453 4113 - FAX: 041 453 4117

email: info@superairbrakesystems.co.za

AFTER HOURS: 082 557 3517

ADAPTORS



BULKHEADS



Bulkhead Adaptor
1/2 x 12 Brass



Bulkhead Adaptor
1/2 BSP x 12 Steel



Bulkhead Adaptor
M22 x 12 Steel



Elbows Imperial



Elbows
Metric



Equal Bulkhead
Elbows



Swivel Elbow
E-12SW-12



Pipe Stems



Hex Nipples
Imperial



Hex Nipples
Metric



Hex Nipple
M22 Bulkhead



Hose Adaptor
Imperial



Hose Adaptor
Metric



Ferrules



Cutting
Rings



Inserts